

6221如何产生5us脉冲

config wave选择square, duty cycle 设为10%, 频率20K, 幅度按需设置

程控指令:

```
SOUR:CURR:RANG 0.002  
SOUR:WAVE:RANG FIX  
SOUR:WAVE:FUNC SQU  
SOUR:WAVE:AMPL 0.0002  
SOUR:WAVE:FREQ 20000  
SOUR:WAVE:DCYC 10  
SOUR:WAVE:ARM  
SOUR:WAVE:INIT
```